UPC 6940500314792
SKU

USE AND CARE GUIDE

1LT INTERIOR FLUSHMOUNT WITH PULL CHAIN SWITCH

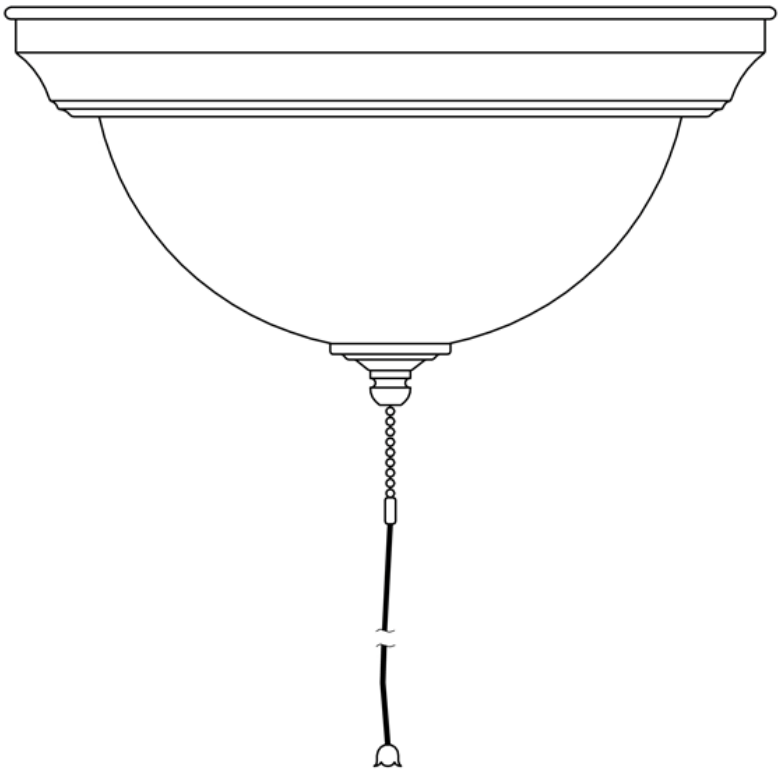

Questions, problems, missing parts? Before returning to the store call
Hampton Bay Customer Service
8 a.m. - 6 p.m., EST, Monday-Friday

1-877-527-0313

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this interior flushmount with pull chain switch. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents **2**
Safety Information **2**
Warranty **2**
Pre-Assembly **2**
Planning for Successful Assembly 2
Package Contents 3
Assembly **4**
Operation **7**
Care and Cleaning **7**
Troubleshooting **7**

Safety Information

CAUTION: Consult a qualified electrician if you have any electrical questions.

Warranty

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling.

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-877-527-0313 or visit www.hamptonbay.com.

Pre-Assembly

PLANNING FOR SUCCESSFUL ASSEMBLY

Read all instructions before assembly.

Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.

Keep your receipt and these instructions for proof of purchase.

Pre-Assembly (continued)

PACKAGE CONTENTS

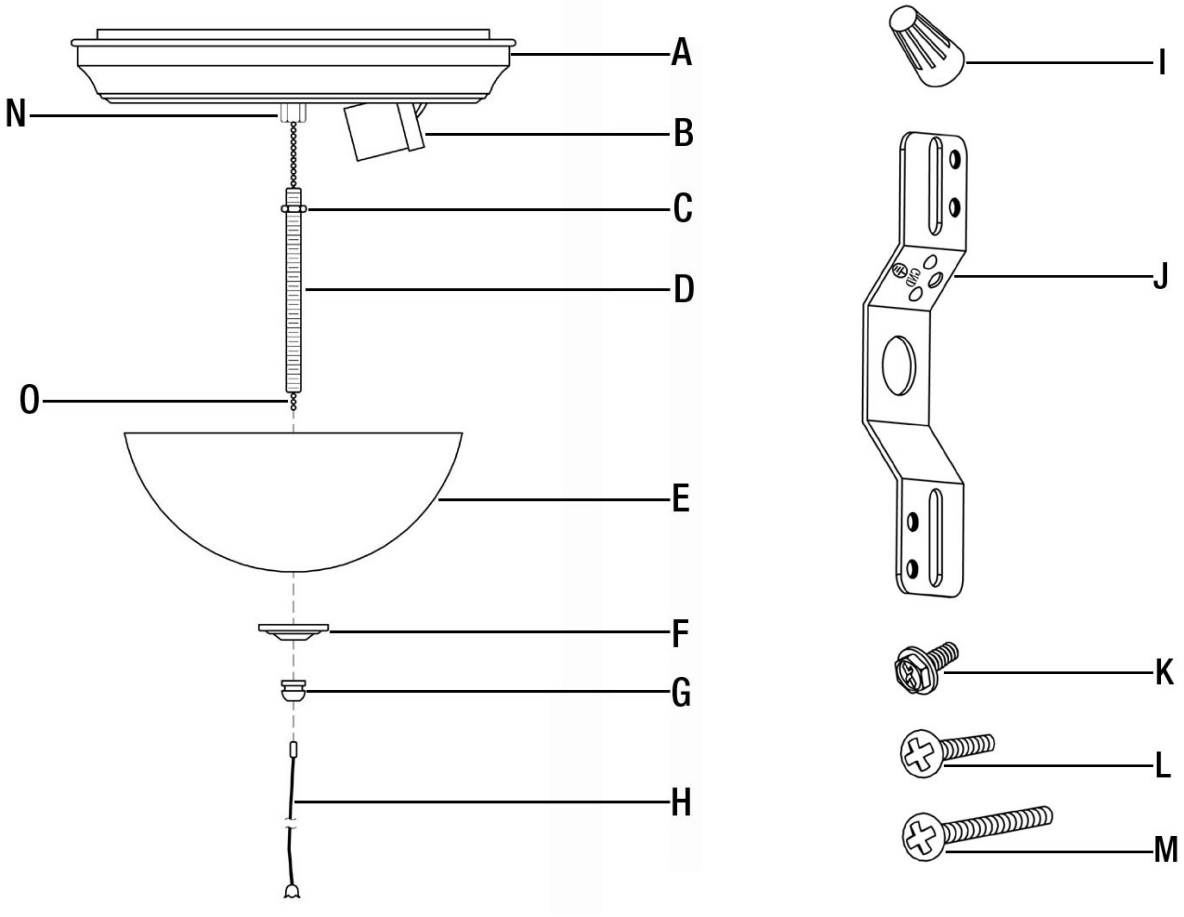

Part	Description	Quantity
A	Canopy	1
B	Socket	1
C	Hex nut	1
D	Nipple	1
E	Shade	1
F	Cover	1
G	Finial	1
H	Pull rope	1
I	Wire connector	3
J	Mounting strap	1
K	Ground screw	1
L	Outlet box screw	2
M	Mounting screw	2
N	Bushing	1
O	Pull chain	1

Assembly

1 Attach the mounting strap to the outlet box

- ☐ Screw the mounting screws (M) into the mounting strap (J).
- ☐ Mount the mounting strap (J) to the outlet box using the two outlet box screws (L).

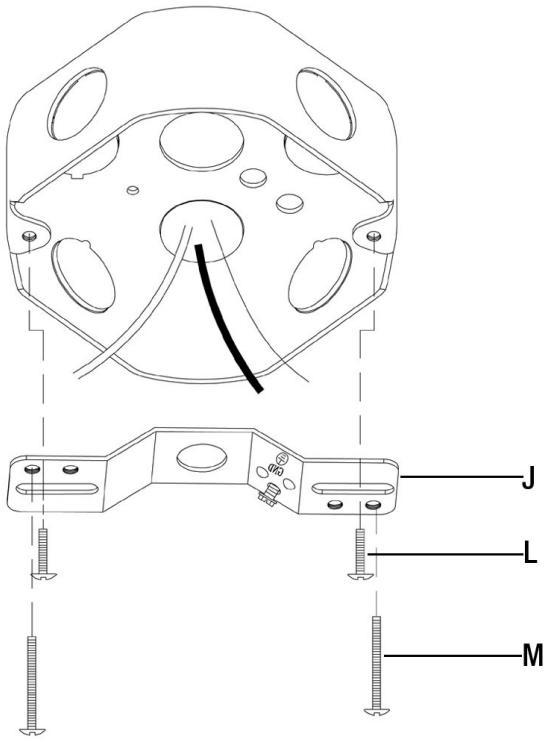

2 Connect the electrical wires

- ☐ Wrap the ground wire from the fixture around the ground screw (K) on the mounting strap (J), and then connect the ground wire from the fixture to the ground wire from the outlet box.
- ☐ Connect the white wire from the fixture to the white wire (neutral wire) from the outlet box.
- ☐ Connect the black wire from the fixture to the black wire (live wire) from the outlet box.
- ☐ Cover the three connections using the three wire connectors (I). Wrap the three wire connections with electrical tape for a more secure connection.
- ☐ Position the wires back inside the outlet box.

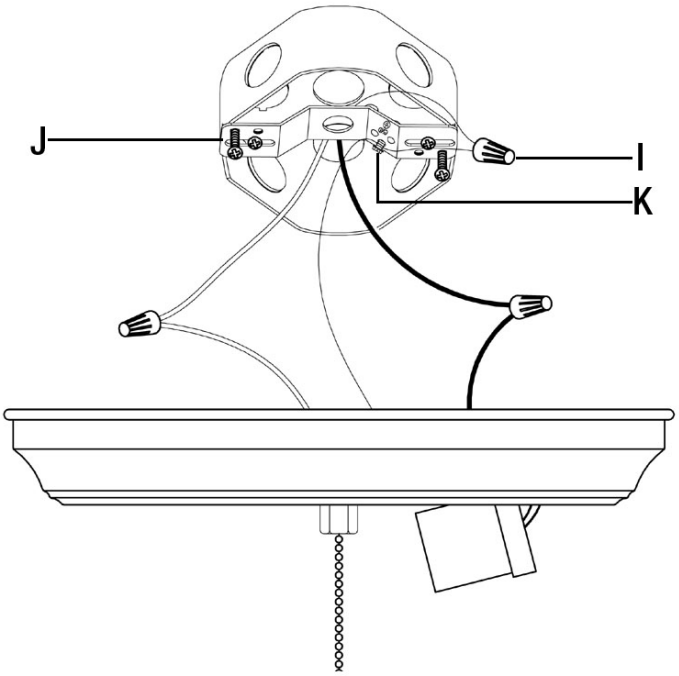

Assembly (continued)

3 Secure the fixture to the ceiling

- □ Place the canopy (A) over the outlet box.
- □ Align the heads of the mounting screws (M) to protrude through the large ends of the keyholes on the canopy (A).
- □ Twist the canopy (A) clockwise until the heads of the mounting screws (M) slide into the narrow ends of the keyholes.
- □ Tighten the mounting screws (M) to secure the canopy (A).

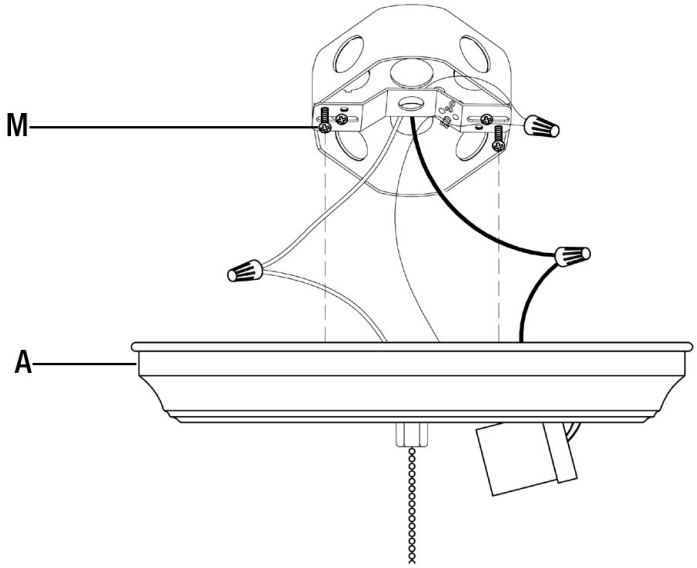

4 Attach the nipple

- □ Guide the pull chain (O) through the nipple (D).
- □ Screw the nipple (D) about a quarter-inch into the bushing (N).
- □ Tighten the hex nut (C) against the bushing (N) to secure the nipple (D).

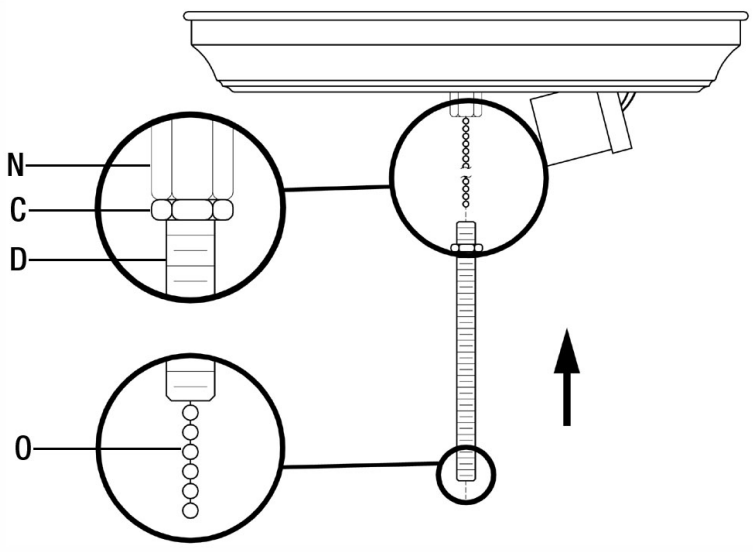

Assembly (continued)

5 Install the light bulb

- ☐ Install a 75-Watt maximum, medium-base incandescent bulb (sold separately) into the socket (B).

NOTE: You can also use a CFL-equivalent energy-saving bulb that does not exceed 15 Watts (sold separately).

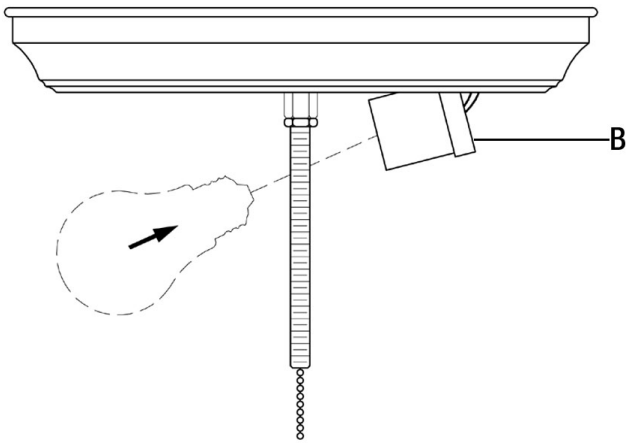

6 Attach the shade

- ☐ Place the shade (E) and the cover (F) over the nipple (D) and the pull chain (O).
- ☐ Guide the finial (G) around the pull chain (O) and onto the nipple (D).
- ☐ Screw the finial (G) onto the nipple (D) to secure the shade (E).

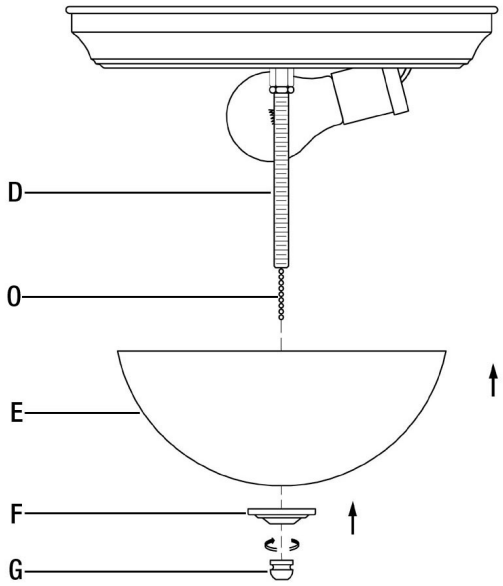

7 Connect the pull rope

- ☐ Hook the pull rope (H) onto the pull chain (O).

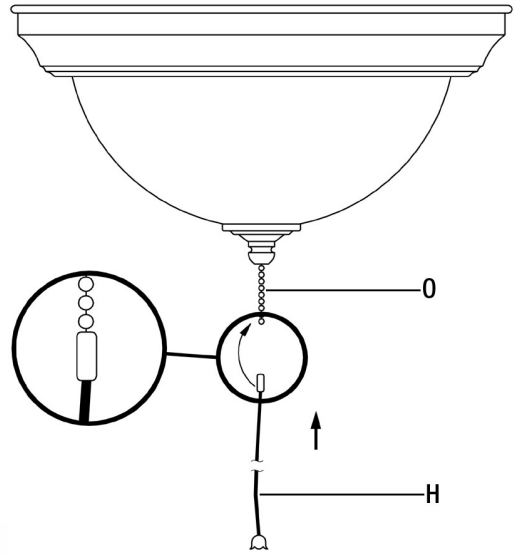

Operation

1 Turn the light on

- Turn the light switch on at the wall or pull on the pull rope to activate the fixture.

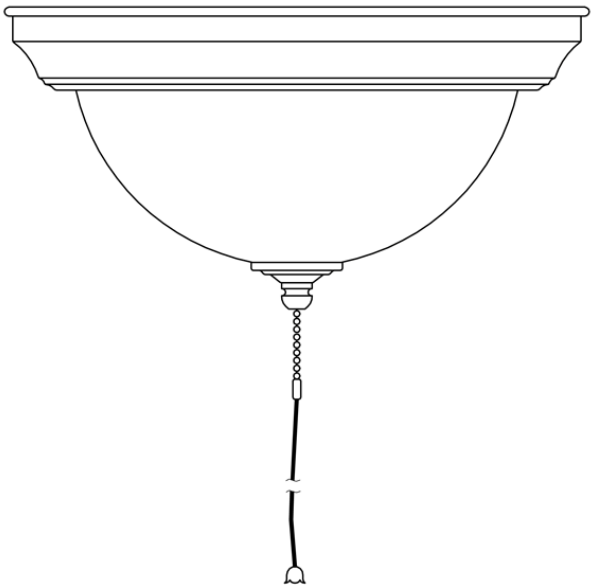

Care and Cleaning

- Clean the lamp with a soft, dry cloth.
- Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	The bulb is burned out.	□ Replace the light bulb.
	The power is off.	□ Ensure the power supply is On.
	Faulty wire connection.	□ Check the wiring.
	The circuit breaker is off.	□ Ensure the circuit breaker is in the On position.
The fuse blows or circuit breaker trips when the light is turned on.	Crossed wires or power wire is grounding out.	□ Check wire connections. □ Contact a qualified electrician or call the Customer Service Team at 1-877-527-0313.

Questions, problems, missing parts? Before returning to the store call
Hampton Bay Customer Service
8 a.m. - 6 p.m., EST, Monday-Friday

1-877-527-0313

HAMPTONBAY.COM

Retain this manual for future use.